


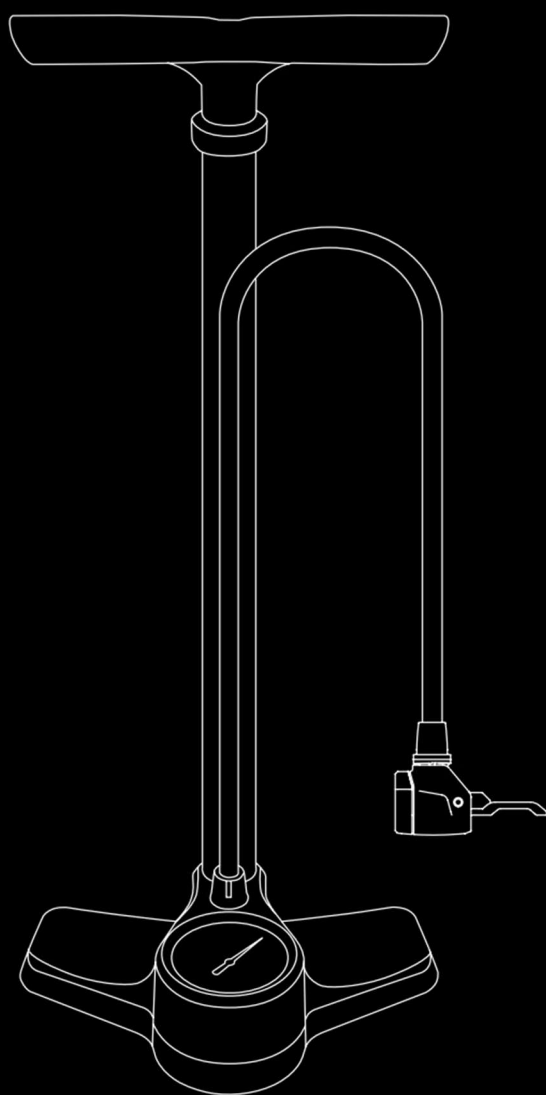


AIRLITE

Manual




Made in Germany

AIRLITE › 12007

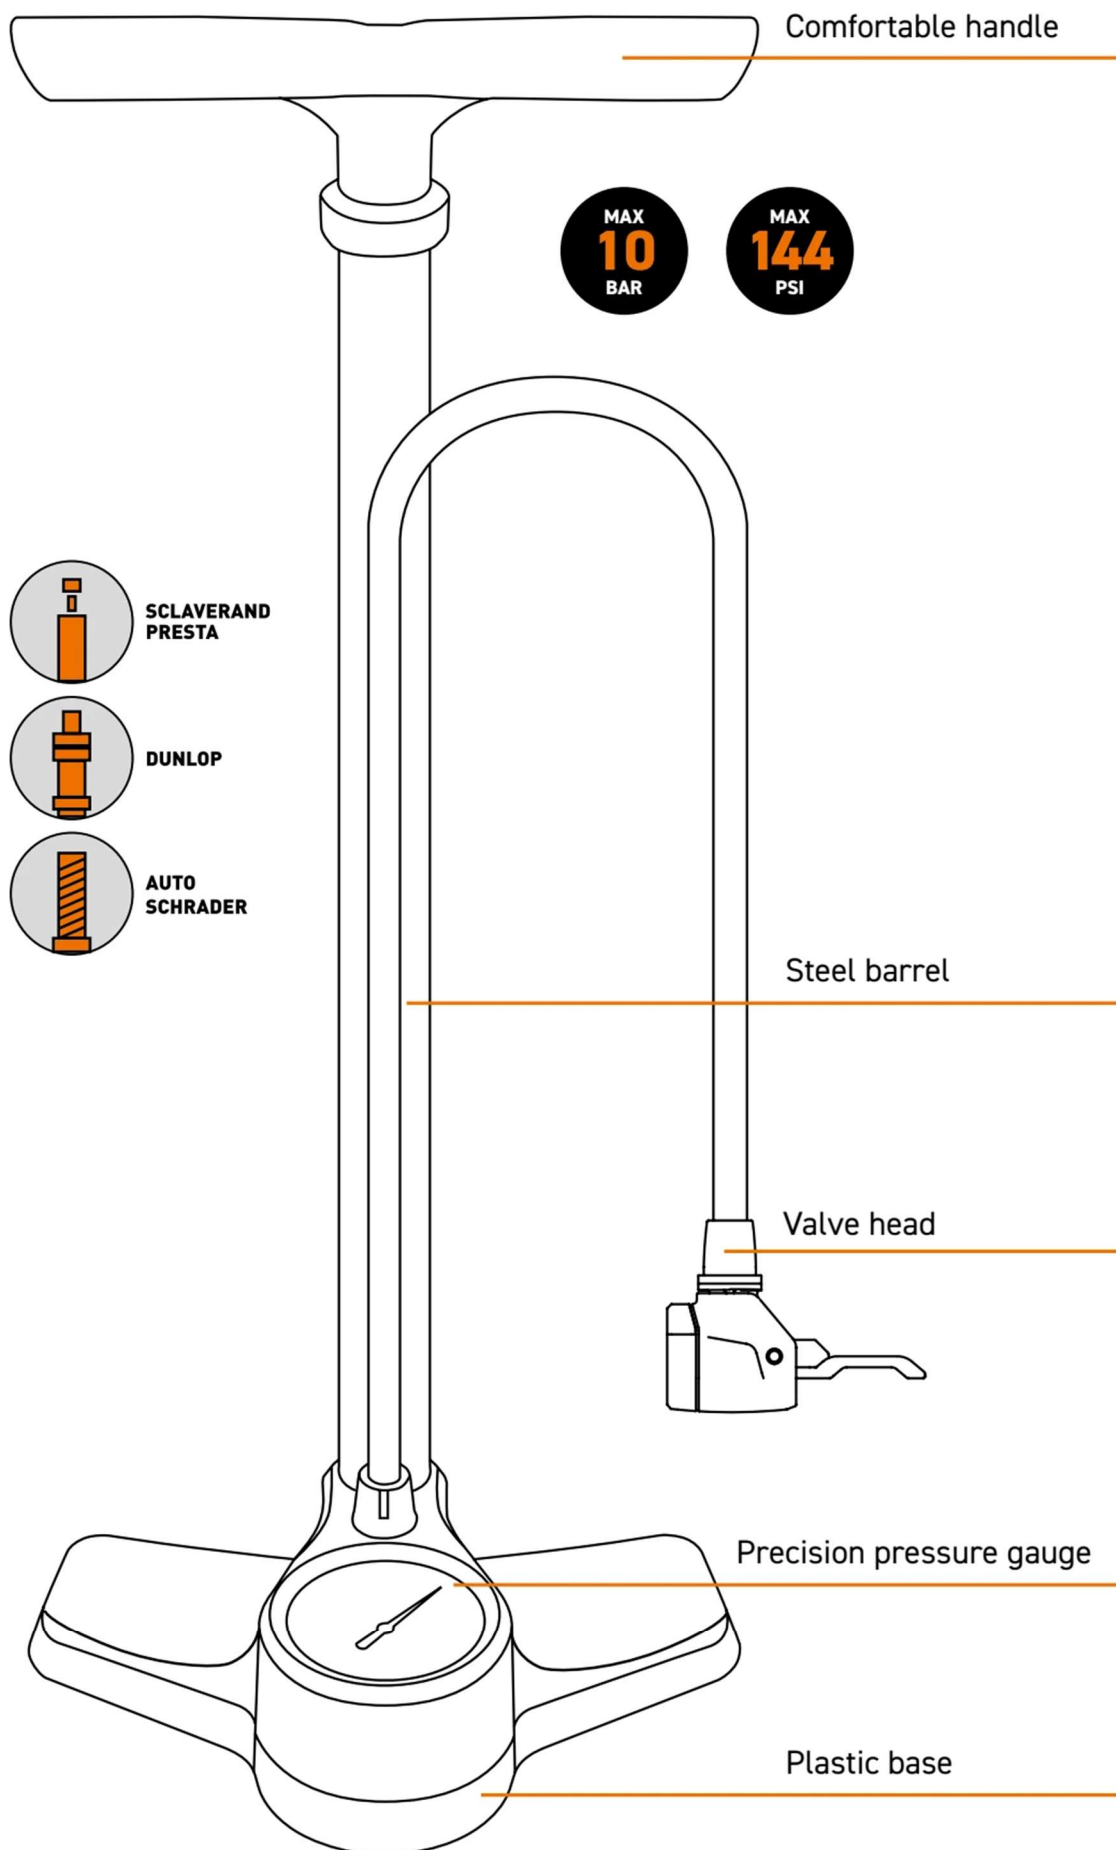


MV-EASY-Info

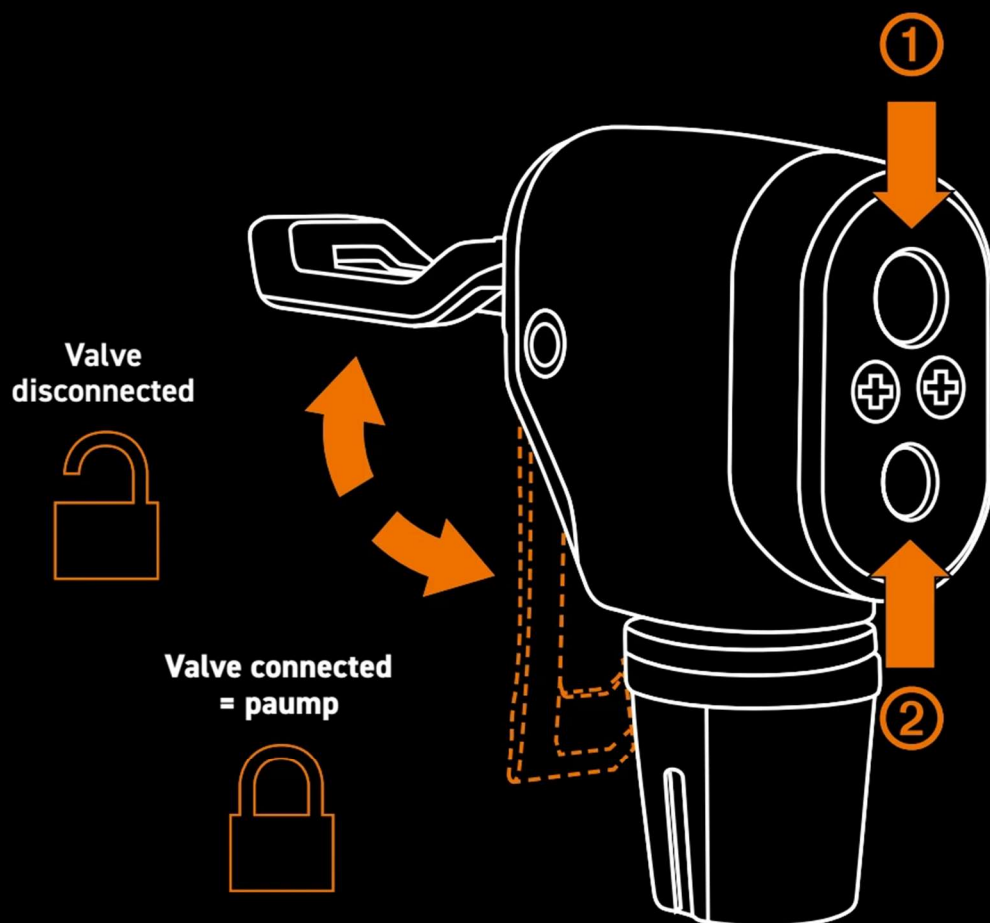

Exchange rubber sealing cuff floor pumps



1. Remove the two Torx screws (T25) of the hose holder. Pull the cylinder rod out of the tube with a strong jerk.

2. Remove the old cup seal. If necessary, use a tool to do this (e.g. screwdriver).

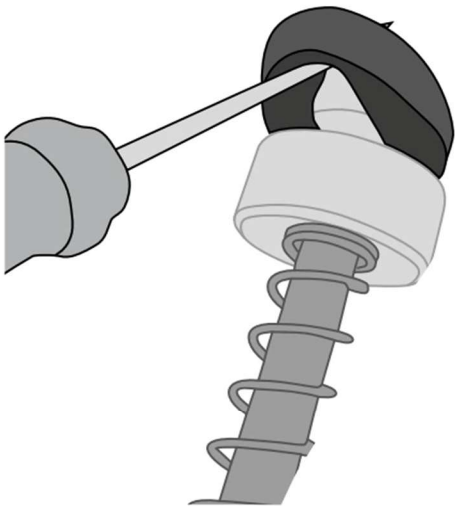

3. Place the new cup over the cylinder rod until it is positioned in the designated joint.

CAUTION: Make sure that it is on the correct side!

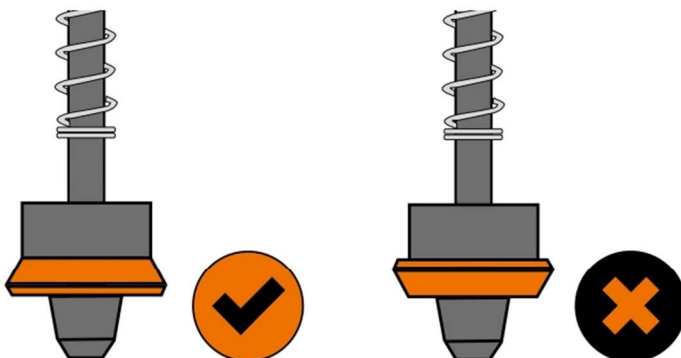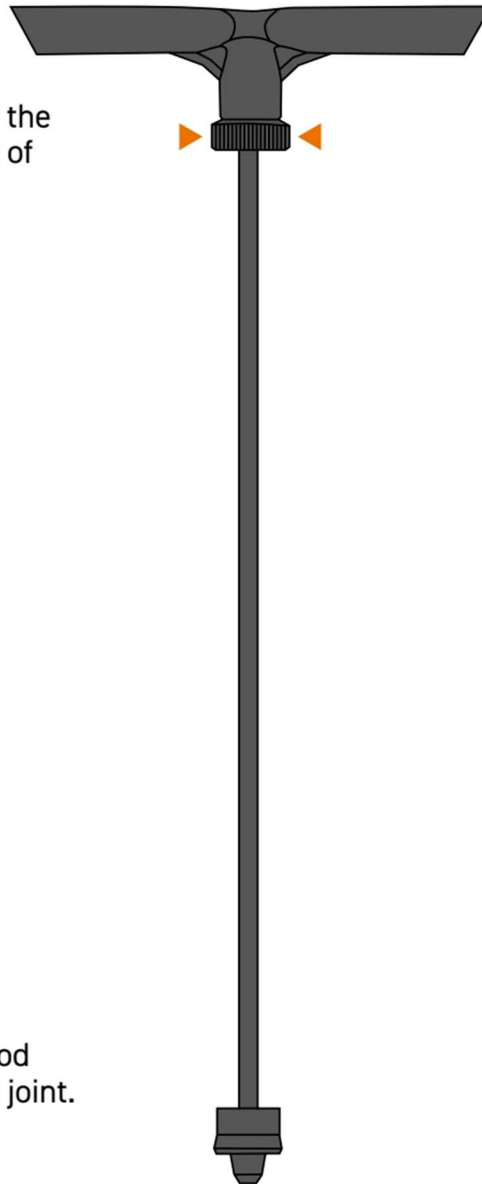

4. Grease the rubber cup seal, re-insert the cylinder rod and screw it in.

Exchange valve seals



3. Insert new seals.

ATTENTION:

Different seals for Schrader and Presta.



4. Replace the cap and screw it tight.



Warranty policy
sks-germany.com

SKS metaplast Scheffer-Klute GmbH
Zur Hubertushalle 4 | D-59846 Sundern
+49 2933 831-0
service@sks-germany.com