

## KOGEL BB MATRIX



To find your bottom bracket, measure the width of the BB shell, the inner diameter of the BB shell and the crank spindle. All measurements are in mm. Specify road or cross bearings. DON'T SEE WHAT YOU'RE LOOKING FOR - CALL **915 777 5666** 



